

#### **Unit Assembly**

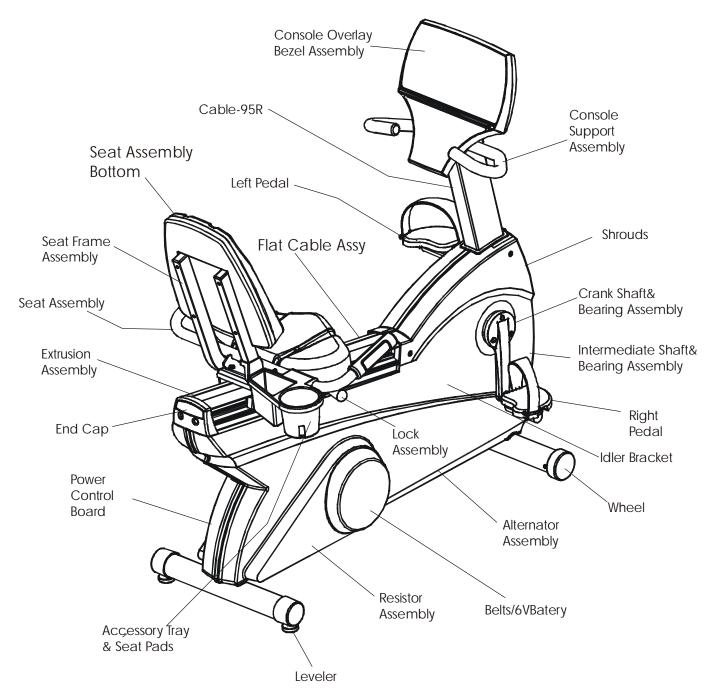


Operation Manual	M051-00K20-A347
Service Manual	M051-00K39-A012

### **Console Overlay Bezel Assembly**

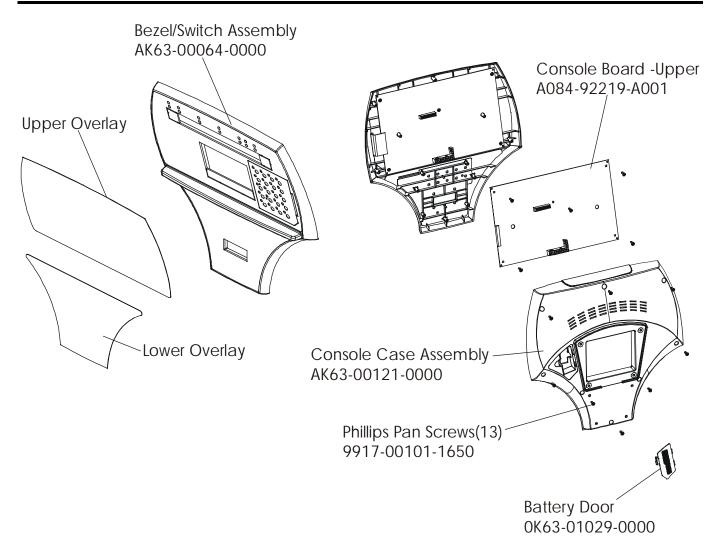


LC9500 Recumbent			
Console Assembly	Overlay Bezel	Upper Overlay	Lower Overlay
AK39-00056-0001 Eng Met	AK63-00063-0001 Eng Met	0K63-01096-0001 Eng Met	0K63-01098-0001 Eng Met
AK39-00056-0003 Ger Met	AK63-00063-0003 Ger Met	0K63-01096-0003 Ger Met	0K63-01098-0003 Ger Met
AK39-00056-0004 Spn Met	AK63-00063-0004 Spn Met	0K63-01096-0004 Spn Met	0K63-01098-0004 Spn Met
AK39-00056-0006 Jap Met	AK63-00063-0006 Jap Met	0K63-01096-0006 Jap Met	0K63-01098-0006 Jap Met
AK39-00056-0007 Frn Met	AK63-00063-0007 Frn Met	0K63-01096-0007 Frn Met	0K63-01098-0007 Frn Met
AK39-00056-0008 ltl Met	AK63-00063-0008 Itl Met	0K63-01096-0008 Itl Met	0K63-01098-0008 Itl Met
AK39-00056-0009 ltl Met	AK63-00063-0009 Itl Met	0K63-01096-0009 Itl Met	0K63-01098-0009 Itl Met
AK39-00056-0010 Por Met	AK63-00063-0010 Por Met	0K63-01096-0010 Por Met	0K63-01098-0010 Por Met


#### **Console Support Assembly**

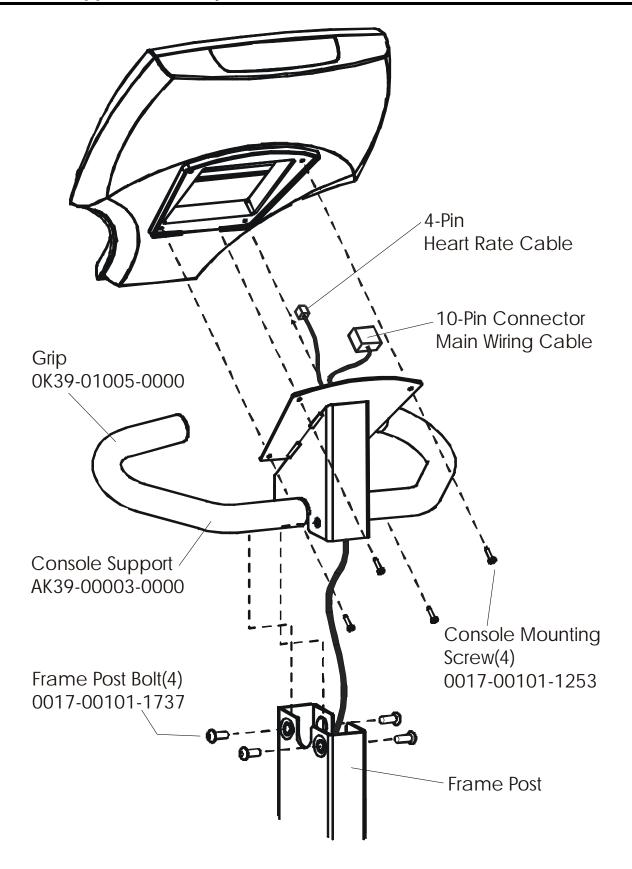


#### Shrouds, End Cap, and Pedals

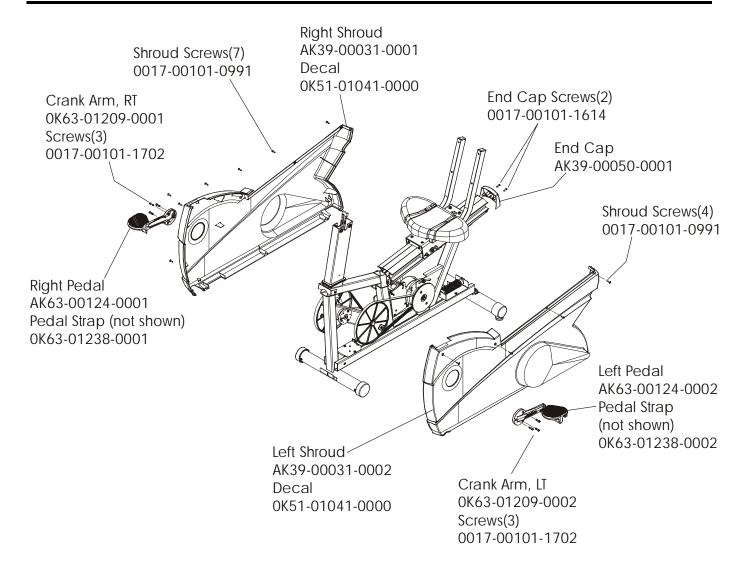


#### **Wheel and Leveler**

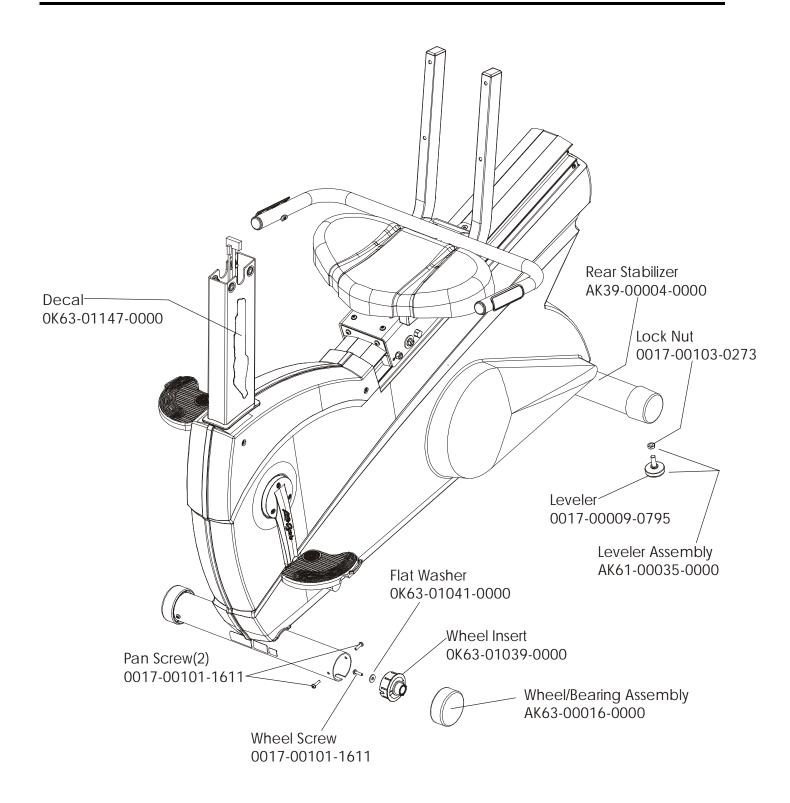


### **Belts and 6V Battery**

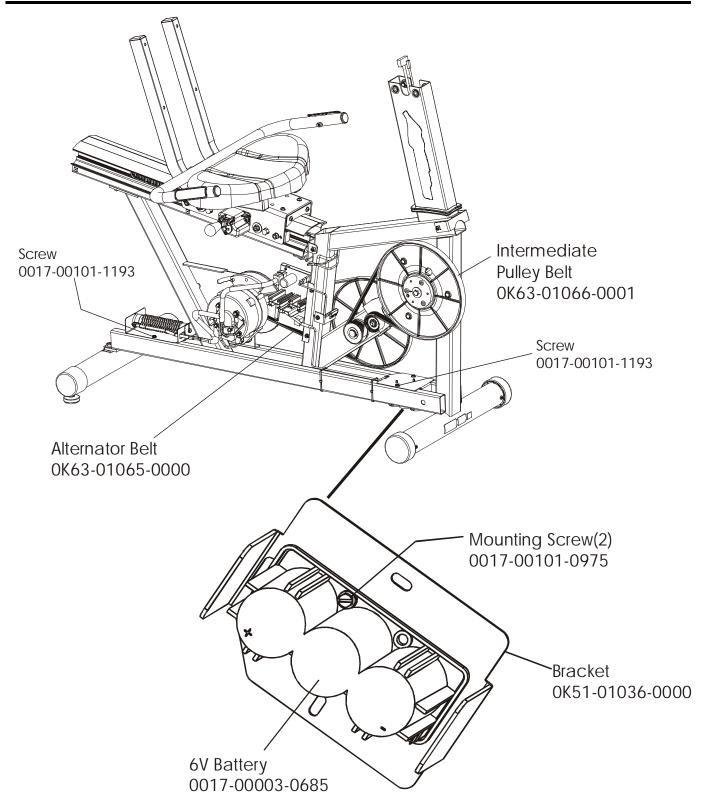


#### **Resistor Assembly**

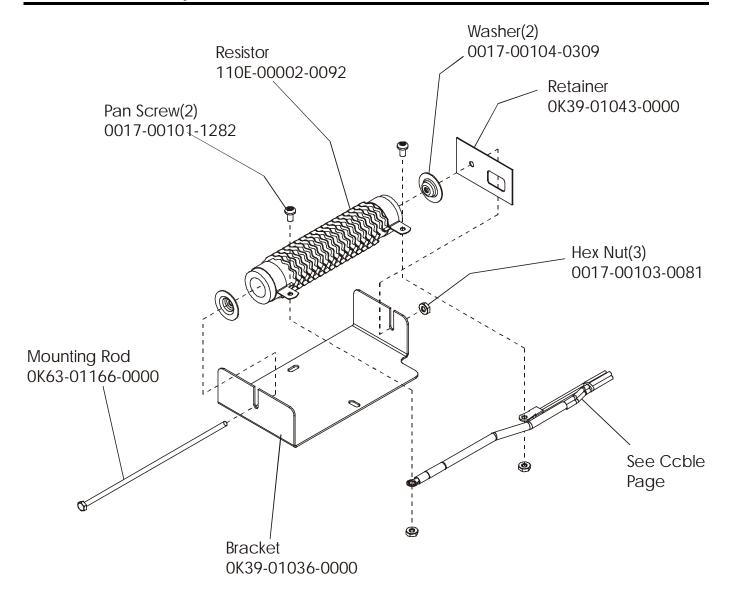


#### Power Control Board - AK39-00022-0001

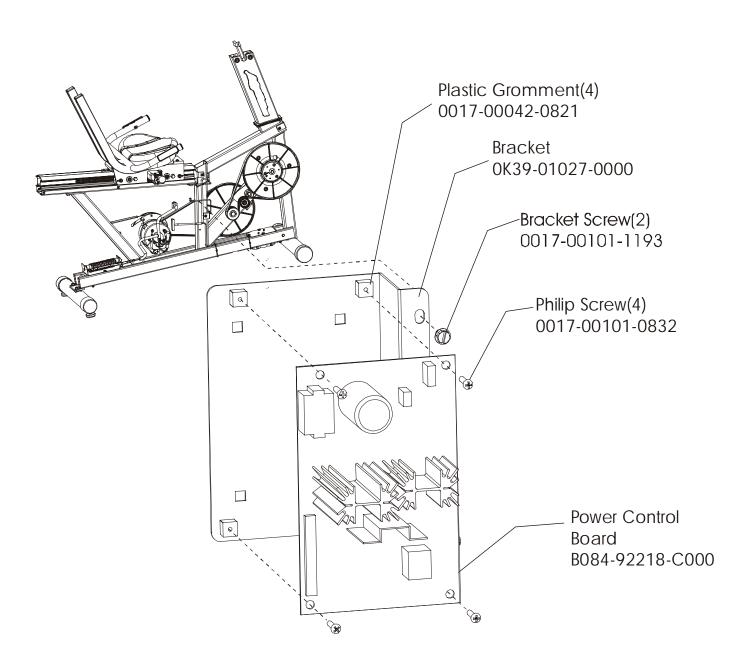


### Alternator w/Pulley - AK63-00093-0000

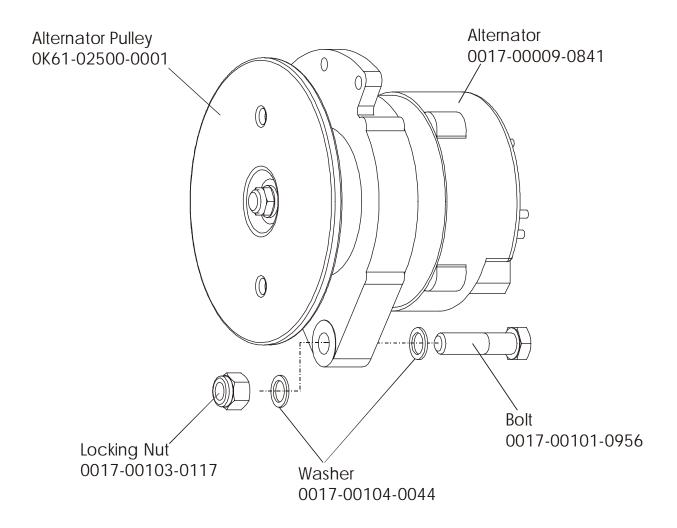


#### Crank Shaft and Bearing Assembly – GK63-00002-0006 Kit

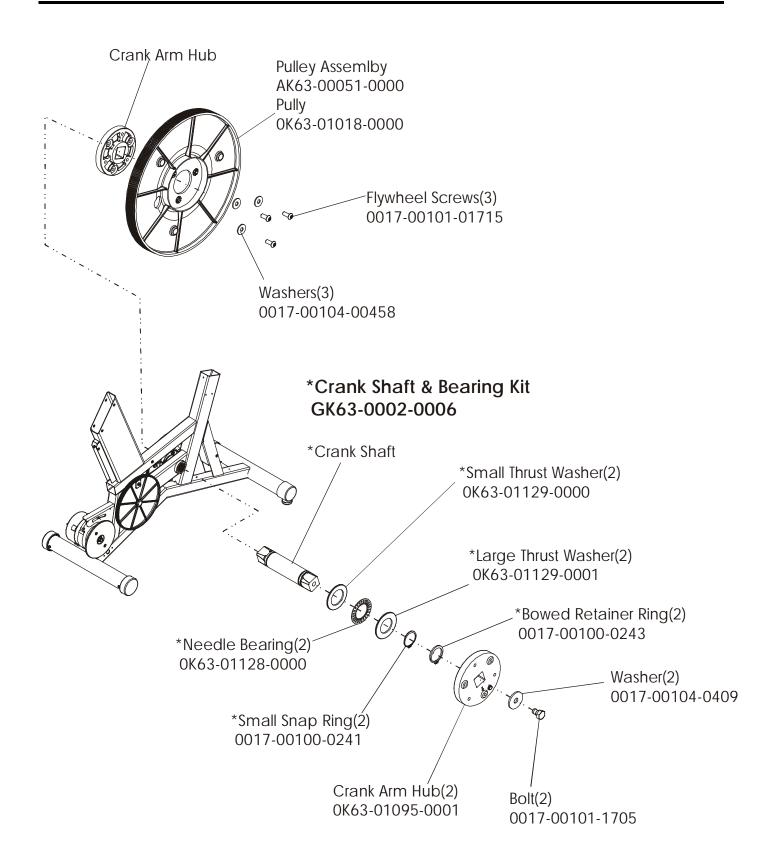


### Intermediate Shaft and Bearing Assembly – GK63-00002-0007 Kit

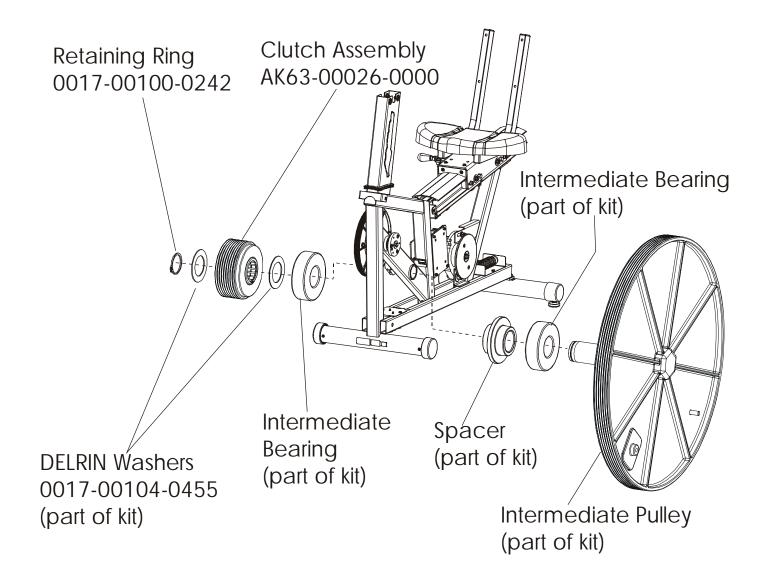


## Idler Bracket Assembly - AK63-00021-0000

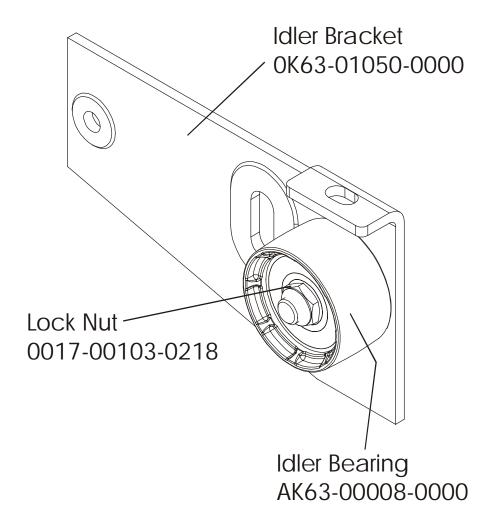


#### **Seat Assembly**

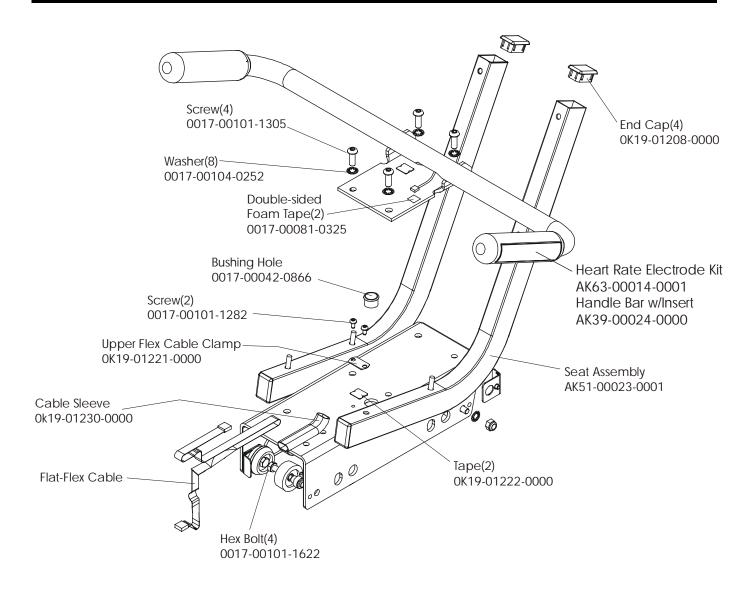


#### **Seat Assembly - Bottom**

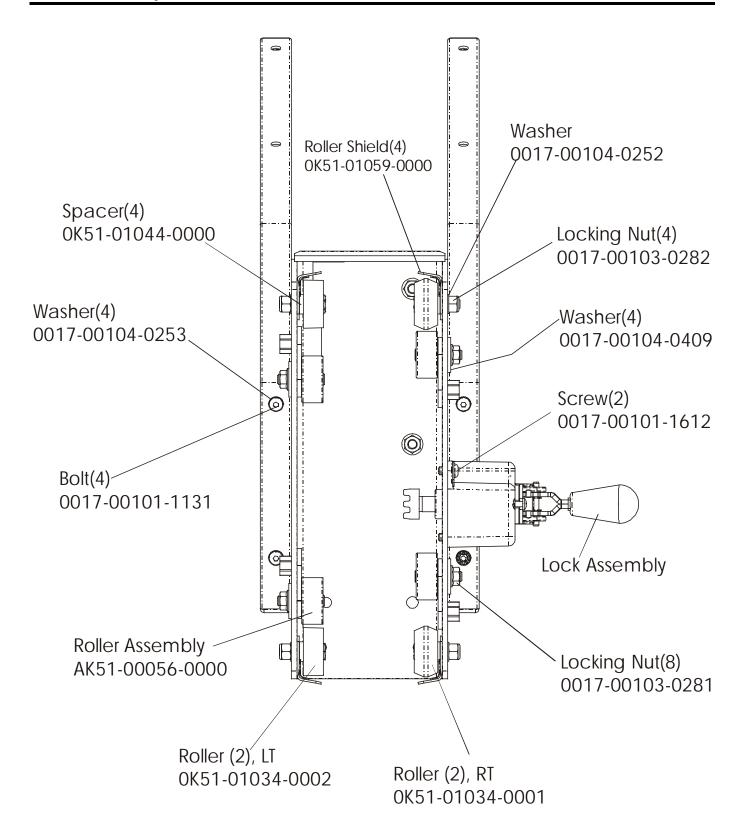


#### **Seat Frame Assembly**

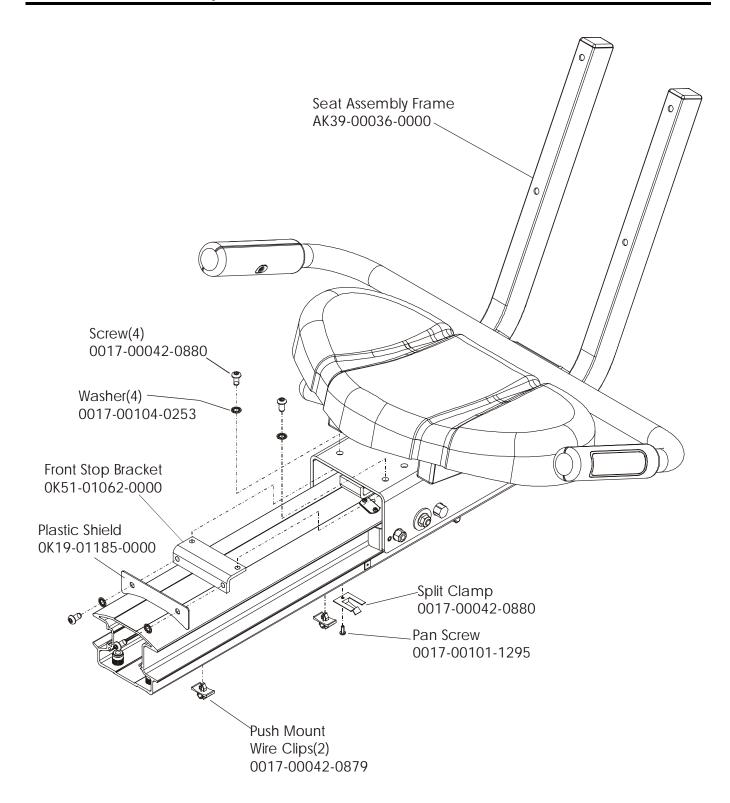


### **Seat Pads and Accessory Tray**

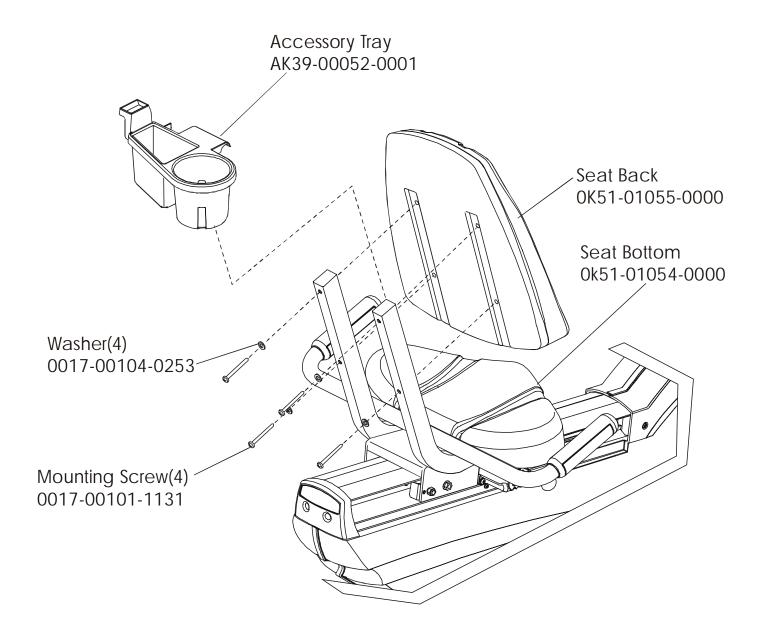


## **Flat Cable Assembly**

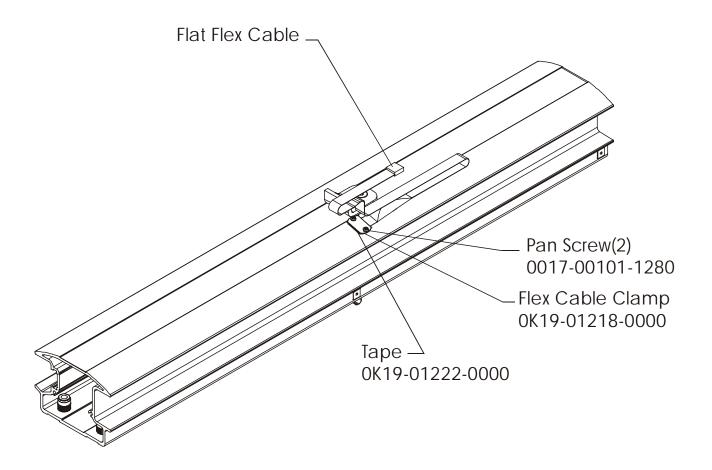

### **Extrusion Assembly**

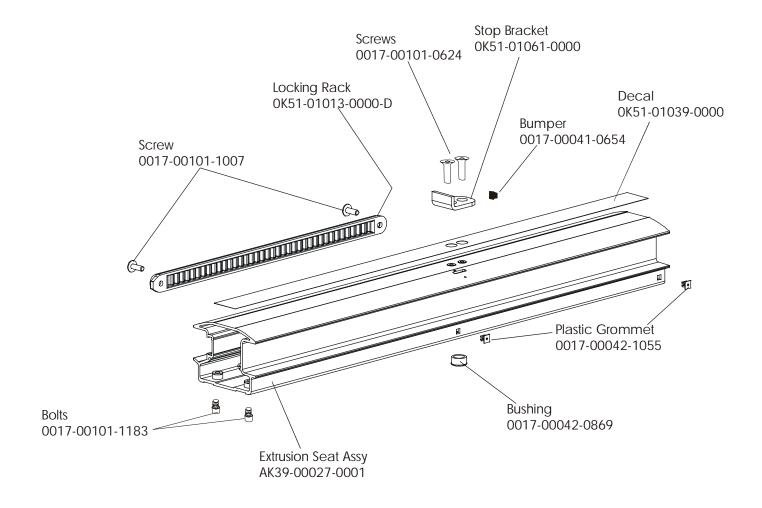

#### Lock Assembly AK51-00053-00000

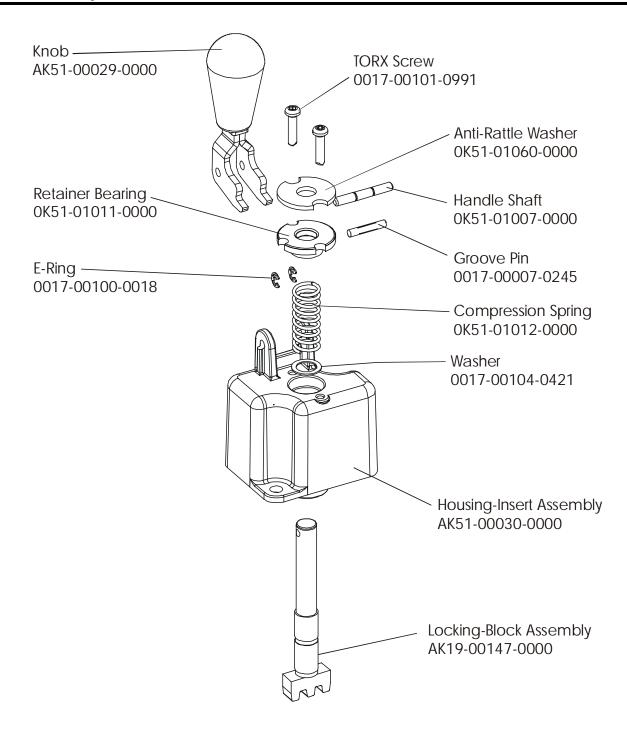

#### Cable - Block Assembly

